



# ZY8521 Series High Bay Light

IP65

-40 °C


+50 °C



E40



## Light distribution curve

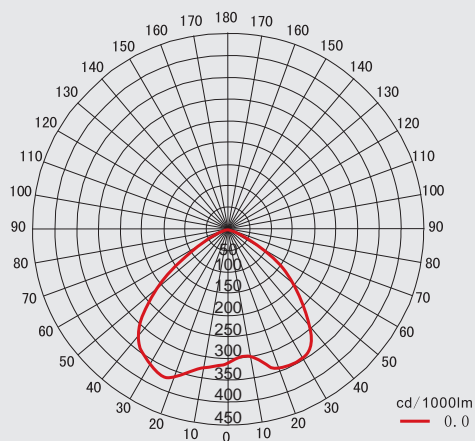

## Application

This product is widely applicable to the illumination for the stations, large factories, supermarkets, warehouses and stadiums as high bay light.

## Characteristics

- High efficient famous light source with reliable performance ensures 20% brighter illumination than light source of other brand.
- Reflector is made of import material. High reflecting effect, ideal for all kinds high bay for fixed illumination.
- Unique structure design and light weight material for great dust-proof, water-proof, corrosion resistance and anti rust.
- The electrical cabinet has good heat radiation, and can radiate the heat produced from the bulb and ballast rapidly, and prevent the electric fittings from damaging due to the high temperature in the ballast box.
- Derrick hanging , chain installation, safety, simple and convenient.

## Main specification

Input Voltage	220VAC 50Hz (110V 60Hz Optional)
Ingress Protection	IP65
Anti Corrosion Grade	WF2
Insulation Grade	I
Space Height Ratio	1.5
Leading-in cable diameter	8mm - 10mm
Dimension	635 × 660mm
Net Weight	13.6Kg


# ZY8521 Series High Bay Light



## Ordering reference

Ordering Reference	Light Source	Rated Wattage (W)	Light Output (lm)	Lamp Average Life (h)
ZY8521-J1000	Metal Halide Lamp	1,000	105,000	12,000

## Drawing of dimension (Dimensions in mm)

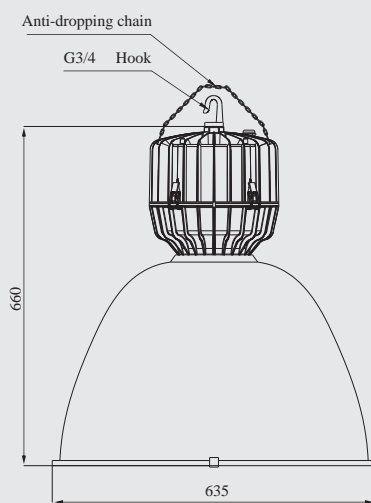

EQUIPAMENTOS  
Iluminando o seu mundo

Av. Ho Chi Min nº 1960 | Maputo - Mozambique  
(+258) 82 5935791 – (+258) 82 7340017 – (+258) 84 0489712  
mpequipamentos@gmail.com | www.mpequipamentos.co.mz  
NUIT: 400385157